

2.5.2 J2 - Remote Control Connection

Table 2-2A. Remote			
Pin Number	Description	Direction	Notes
1	485 select		Connect to ground to enable 485 mode
2	RX_232	Input	
3	TX_232	Output	
4	N.C.		
5	Ground	GND	
6	RX_A (-)	Input	
7	RX_B (+)	Input	
8	TX_A (-)	Output	
9	TX_B (+)	Output	